



Typical AVB Irrigation system installation

AVB must be installed in conjunction with a "wild head" downstream of the AVB. The wild head must be sold as a turf sprinkler or a hole may be drilled in a pipe to serve as a wild head when the orifice is as large as a turf sprinkler orifice. The sprinkler may not include an automatic shut off.

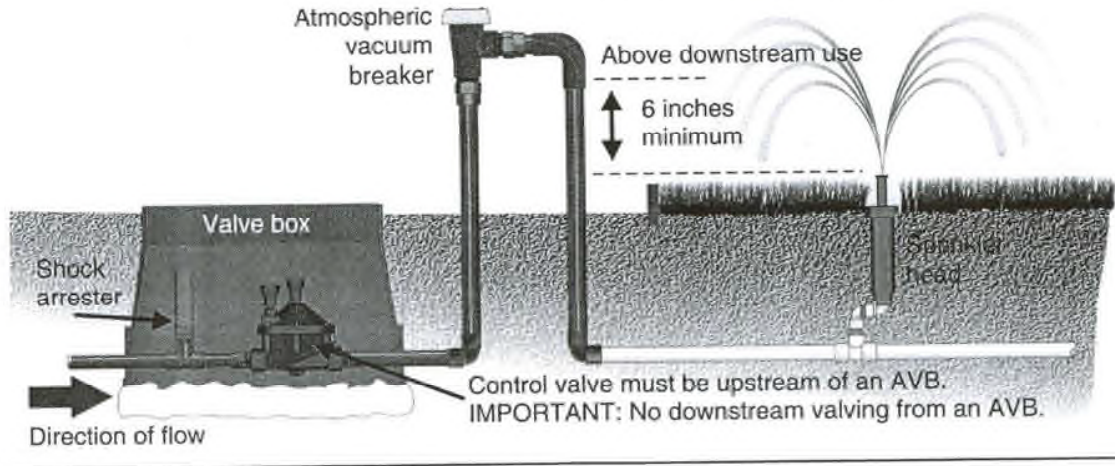

Typical PVB Irrigation system installation - no "wild head" required.

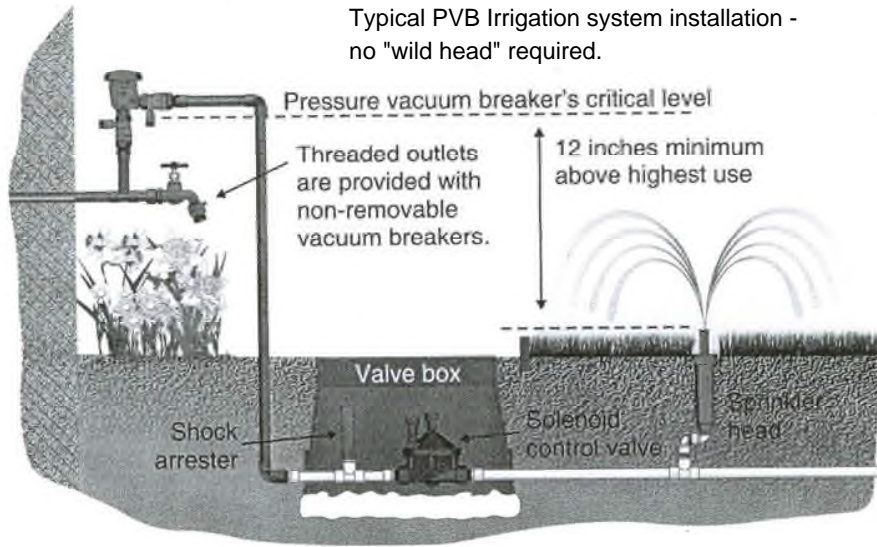

Typical RP irrigation system installation when chemicals added

